

ITM./ART. 153504 Decorative Waste Container

Questions?

Please call customer service at (866) 728-6187 from 9am - 5pm (EST), Mon - Fri or e-mail <u>customerservice@srg-usa.com</u>.

PLEASE READ ALL INSTRUCTIONS BEFORE USE.

WARNING:

Do not discard any flammable or corrosive liquids or solids into the waste container.

To prevent frost damage, make sure the lid completely covers the liner and base to prevent water from collecting inside the waste container. Empty any water from the waste container in temperatures below 41° F / 5° C This waste container is not intended for storage of food or beverage.

CARE AND MAINTENANCE:


This waste container is made of durable, weather-resistant polyresin, finished in top quality outdoor paint with a final coat of clear lacquer.

Please empty and clean your waste container regularly using only a soft cloth or sponge, water and very mild, well-diluted dish soap. To avoid scratching or damaging the finish, DO NOT USE ABRASIVE CLEANERS, BRUSHES OR STEEL WOOL. DO NOT USE CHEMICALS such as chlorine bleach.

If the decorative waste container will not be used for a period of time, please empty the liner, clean the entire waste container and store the unit in a dry place.

USER INSTRUCTIONS: The decorative waste container comes fully assembled. To use:

- 1. Place the base on level ground in the desired location.
- 2. Place the liner into the base. The liner can be used with or without a liner bag (not included).
- 3. Place the lid on top of the base.

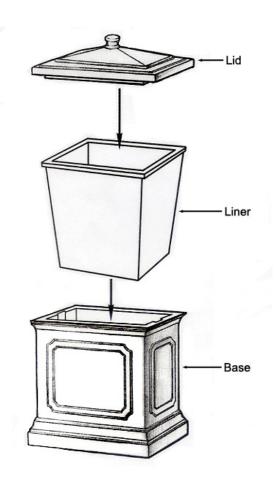

NOTE: Diagram for illustrative purposes only and not to scale.