



Item #167009 Zen Oil Lamp Fountain

Questions, Problems, Missing Parts?

Before returning to retailer, please call customer service at (866) 728-6187 from 9am – 5pm (EST), Mon – Fri or e-mail customerservice@srg-usa.com.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product. Please contact customer service for missing parts.

Carton Contents

Basin	1 pc.
Pedestal	1 pc.
Bowl	1 pc.
Ball	1 pc.
Oil Lamp Canister	1 pc.
(Oil not included)	
Pump	1 pc.
Water Supply Tube	1 pc.
Submersible Light	1 pc.
Transformer	1 pc.

Replacement Parts (not included)

 
Bulb: MR-11 type halogen bulb,
12 volts, 10 watts maximum

Pump: # HI-2000

Transformer: #48C-YL-12-12V

Contact Customer Service for
missing parts.

If the fountain ball, bowl, pedestal, or
basin are missing or damaged, the
unit must be returned to or
exchanged at the retailer.

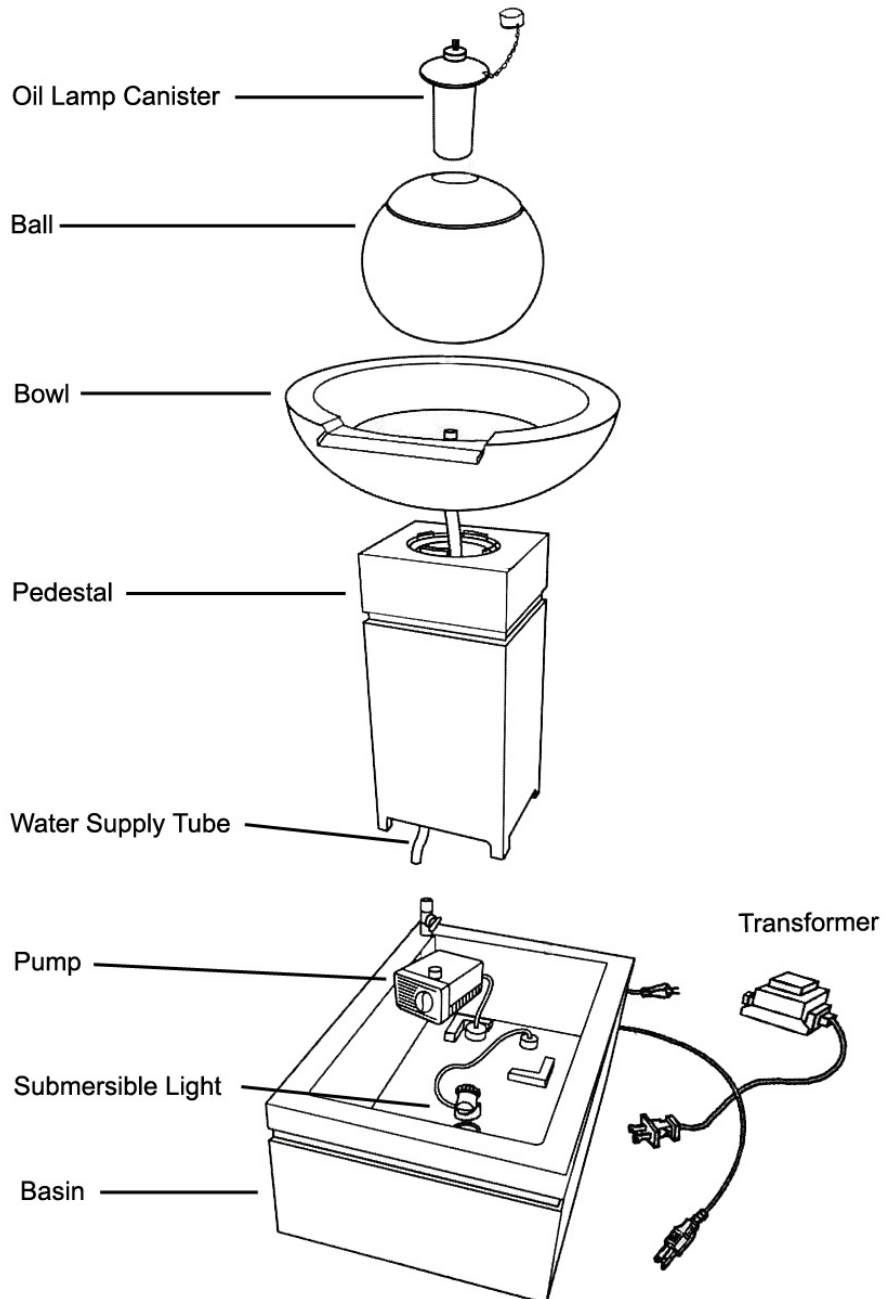

NOTE: Diagram for illustrative purposes only and not to scale. There may be technical and design modifications to constantly improve this product.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

2. Read and follow all instructions that are on the product or provided with the product.
3. For a cord-connected or direct plug-in power unit, do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install the fountain within 3.05 m / 10 ft of a pool or spa. When the pump is connected to a GFCI-protected circuit, the fountain unit has the option of being installed no less than 1.52 m / 5 ft from a pool or spa.
7. For a cord-connected or direct plug-in unit, do not use in a bathroom.
8. For a direct plug-in or cord-connected power unit:

WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

9. For a permanently connected power unit:

WARNING: Risk of Electric Shock. When used outdoors, install only on a circuit protected by a Class A GFCI.

10. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

11. For a unit intended to be mounted at a height greater than 0.3 m / 1 ft from the ground surface.

WARNING: Risk of Electric Shock. Mount the unit at a height greater than 0.3 m / 1 ft from the ground surface.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

ADDITIONAL WARNINGS AND CAUTIONS

 
 
- This fountain was designed and intended for outdoor use.
- Please make sure you are using the proper power source as indicated.
- Do not exceed the voltage shown on the pump and/or transformer.
- Keep the power cord away from high temperatures, heat sources and sharp points or edges to avoid damage to cords which may cause an electrical hazard.
- For plugs with a 3-prong, grounded type plug, do not remove the grounding pin from the plug on the power cord.
- Inspect all power cords for damage before installation, use or maintenance. Replace entire pump or transformer if damage is found.
- The included pump should only be used with portable, self-contained fountains no larger than 1.52 m / 5 ft in any direction.
- Always disconnect the pump and/or transformer from the power source before performing any maintenance on the pump, lights (if equipped), or fountain.
- Do not lift the pump and/or transformer by its power cord.
- Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
- Do not pump heated liquids.
- The pump has been evaluated for use with water only.
- Operate fountain with fresh water only. Avoid heavily chlorinated water and water with high pH levels.
- Do not leave the fountain running unsupervised for extended periods of time.
- If equipped, please ensure all lamp holders are fitted with a bulb.
- Do not tip the fountain to empty the water. Use a siphon pump or a small bucket.
- This product is not a toy! Please keep out of reach of children and pets.

Note: Each fountain product may have minor variations in texture, finish and appearance. Some products and finishes are intentionally weathered and worn in appearance to enhance the aesthetic beauty of the finished product and make each fountain truly unique.

ASSEMBLY INSTRUCTIONS

Estimated assembly time: Approximately 15 minutes
Assemble the fountain in the location you intend to use it. Do not move with water in the fountain.

1. Place the fountain basin on a flat, level surface and lead both pump power cord and light power cord through the cord slot on the underside of the basin. Slide the submersible light into the light socket on the bottom of the basin and carefully wedge the power cord into the cord clip. Place the pump into the basin making sure the flow rate of the pump is set to the maximum (+) position (if applicable).
2. Attach the one end of the water supply tube to the outlet tube of the pump. Place the pedestal over the pump and lead the water supply tube up and out of the opening at the top of the pedestal. Attach the other end of the water supply tube to the connector at the bottom of the bowl. Align and attach the connector on the bottom of the bowl with the connector on the top of the pedestal and twist clockwise to lock. Make sure the copper spout is pointed at the long end of the basin as shown in the diagram.
3. Align the connector attached at the underside of the ball with the hole in the bowl, and then insert it into the hole making sure it is fully seated and stable.
4. Insert the fuel oil canister into the opening at the top of the ball.
5. Fill the basin with clean water. The water level should be approximately 2.54 cm / 1 in below the top edge of the basin.
Note: Do not fill past water line marked on the inner edge of the basin.
6. Connect the light cord to the transformer and then connect the transformer and the pump code to a GFCI outlet. The fountain should light and start to flow.
7. If applicable, adjust the flow rate of the pump to the desired level. Remember to always disconnect the pump from the power source before making any adjustments to the pump or lights.

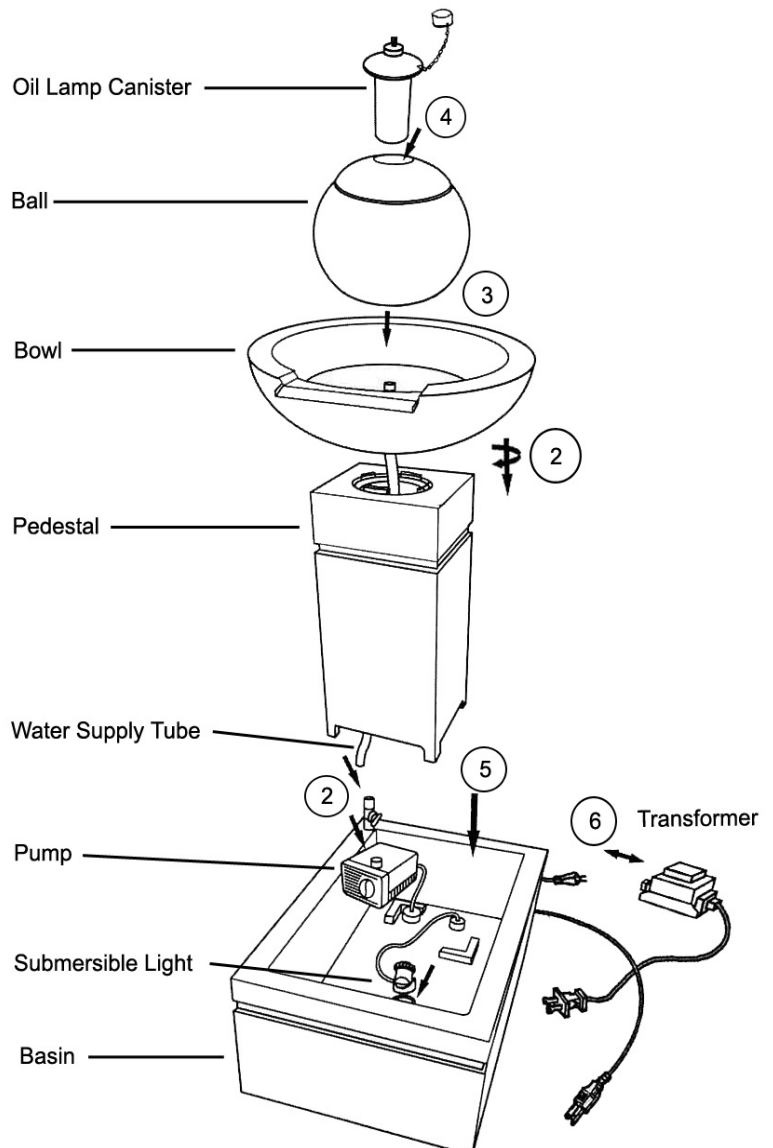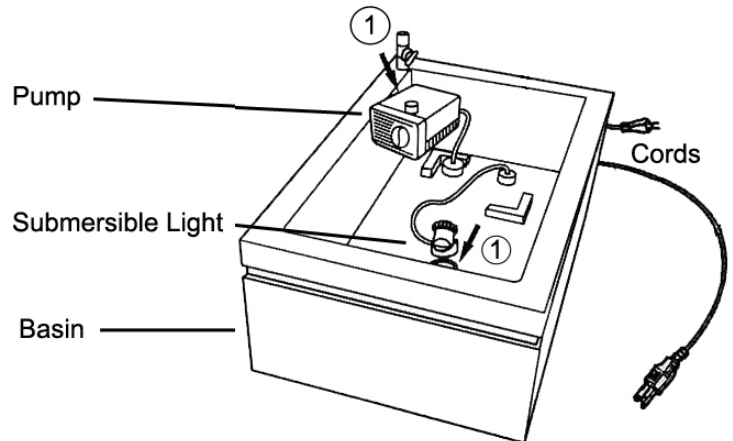


CARE AND MAINTENANCE

1. Keep the water clean and clean the fountain periodically to prevent mineral deposits and contamination which may clog the pump.
2. Use a pre-filter on your pump if available.
3. Regular cleaning of the pump will be necessary depending upon the environment in which it is operated. Clean the pump when it is visibly soiled or when a noticeable decrease in performance is detected.

Failure to clean the pump will result in overheating of the pump.

 
4. Before cleaning, always disconnect the pump from the power source.
5. Disassemble the pump by removing the filter and gland. Remove the impeller/rotor assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the area inside of the pump where the impeller/rotor assembly was. Clean the filter, gland and impeller in warm soapy water. Reassemble the pump and inspect for proper operation.
6. Check the water level regularly to ensure the pump is completely submerged during operation.
7. To eliminate water damage to floors and/or surrounding fountain areas, check for leaks and excessive splashing after initial installation and on a regular basis.
8. Place the fountain in a location that will not be damaged should the area come in contact with liquids.
9. If the fountain is not in use for an extended period of time, disconnect the power and empty all the water from the fountain. Do not tip the fountain to empty the water. Use a siphon pump or a small bucket.
10. The fountain should not be operated in temperatures below 5° Celsius / 41° Fahrenheit to prevent frost damage. If the fountain is stored outdoors in freezing temperature, disconnect the power, empty all the water from the fountain and make sure it is completely dry.

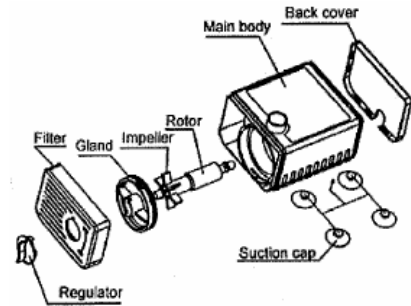

Light Bulb Replacement Instructions:

1. If an accent light bulb is burned out, unplug the transformer from the power source and allow a few minutes for the light bulb to fully cool before handling.
2. Remove the lamp's plastic cover by twisting in a counter clockwise motion and remove the transparent lens cover.
3. The bulb may now be pulled out from its socket and replaced with a new bulb (not included).

 Replacement for the high intensity halogen bulb:
MR-11 type halogen bulb, 12 volts, 10 watts maximum.

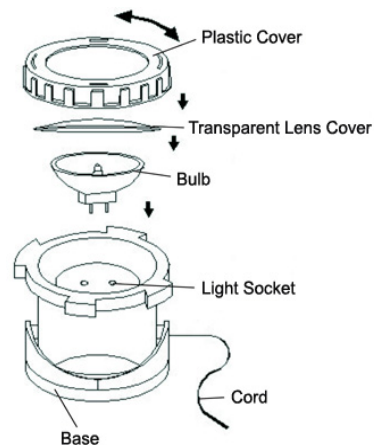

IMPORTANT SAFETY INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS



WARNING - Lighted lamp gets HOT quickly. Do not touch hot lens or cover.
Unplug and allow the lamp to cool before handling the lamp.
Keep lamp away from materials that may burn.
Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage lamp.
Do not operate the lamp without bulbs or with missing or damaged lamp covers.

Troubleshooting Guide:

If the pump operates, but, there is no water flow...

1. Check to make sure the pump is fully submerged.
2. Check the supply tube for any kinks or folds and correct.

If the pump operates, but there is no water flow and the pump is fully submerged and the supply tubing has no kinks...

1. Disconnect the pump from the power source.
2. Disconnect the supply tube from the pump outlet.
3. Check for clogs or holes and clean the tubing inside and outside if necessary.
4. Check for clogs and clean the pump inlets and outlet if necessary.
5. Place the pump back into the water outlet side up and then re-connect the pump to the power source.
6. Once the water begins to flow from the pump, re-connect the supply tubing to the pump outlet.

 
The oil lamp does not burn. ...

1. Please check the oil canister and replenish with citronella oil if necessary.

GARDEN TORCH FUEL CANISTER

INSTRUCTIONS:

1. Filling: Unscrew flame guard and wick assembly from the fuel canister by turning in a counter-clockwise direction. Fill fuel container with citronella torch fuel (citronella torch fuel not included). Do not fill past line marked on canister. Screw flame guard and wick assembly back onto fuel canister. Do not over tighten. Do not fill past line marked on canister.
2. Lighting: Allow the wick to become completely saturated with oil before lighting. Do not set wick higher than 1/2 inch above top of flame guard. Keep loose clothing, hair and face from coming in contact with flame when lighting.
3. Extinguishing: A snuffer cap has been provided for this purpose. Carefully place snuffer cap completely over wick and leave in place until the flame has been completely suffocated.

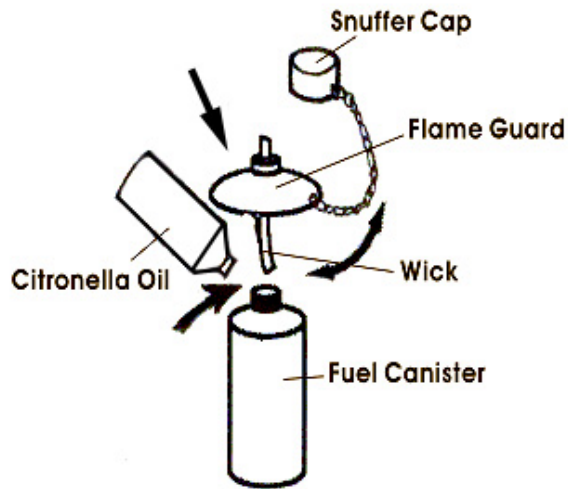

MAINTENANCE:

1. Do not ignite the wick while it is raining. Please keep the snuffer cap over the wick to prevent rain from entering the fuel canister.
2. The primarily function of the citronella oil lamp is to repel insects. Only refill with citronella torch fuel.

WARNINGS:

- **DANGER: TORCH FUEL IS HARMFUL OR FATAL IF SWALLOWED.**
- Place torch away from other combustibles such as wooden structures, fuels, clothing and fabrics or dry vegetation.
- Never leave a burning torch unattended.
- Keep out of reach of children.
- Never use gasoline or other flammable fuels in this torch.