



Item # 226389

 
# URN FOUNTAIN

Model # F30947HQ



Questions, Problems, Missing Parts? Before returning to retailer, call our customer service department at 1-866-728-6187 from 9 a.m. – 5 p.m. EST, Monday – Saturday, or e-mail customerservice@srg-usa.com.

Part	Quantity
Fountain Upright	1 pc
Plate	1 pc
Pedestal	1 pc
Reservoir	1 pc
Pump	1 pc
Pump Hose	1 pc
Drains	2 pcs
Screws	2 pcs
Washers	2 pcs

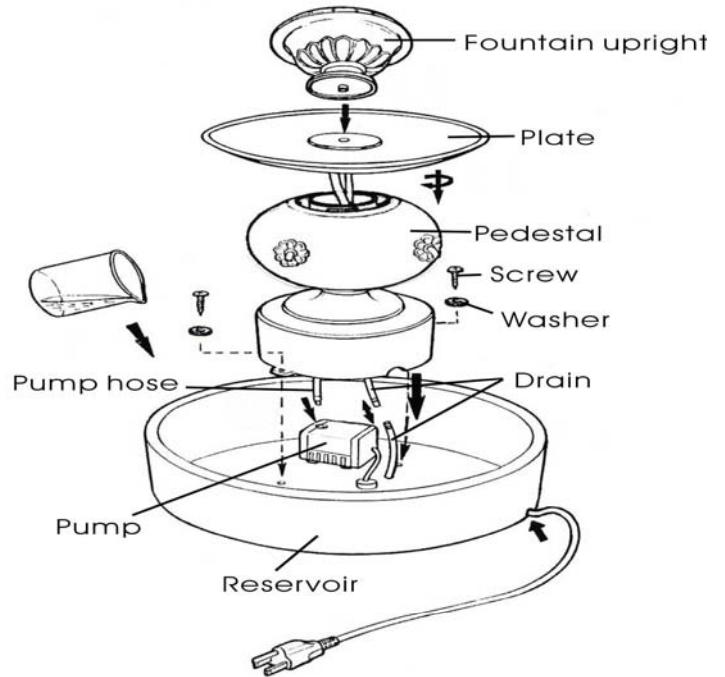

NOTE: Diagram shown is for illustrative purposes only.

## **⚠ Warnings and Cautions**

### Warnings:

- To reduce the risk of electric shock, connect pump only to a Ground Fault Circuit Interrupter (GFCI) outlet.
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source before performing any maintenance or work on the pump or fountain.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- Do not remove the grounding pin from the power cord on pumps with a three-prong, grounded-type plug.

### Cautions:

- Do not install the fountain within 10 ft. (3.05 m) of a pool or spa. If the pump is connected to a Ground Fault Circuit Interrupter (GFCI) protected circuit, the fountain can be installed no less than 5 ft. (1.52 m) from a pool or spa.
- Use the pump only with portable, self-contained fountains no larger than 5 ft. in any dimension.
- Use a proper power source as indicated on the pump label. Keep the cord away from high temperatures and/or heat sources.
- Do not lift the pump by its power cord.
- Keep the fountain out of reach of children.
- Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
- Do not pump heated liquids.
- Operate with freshwater only. Avoid heavily chlorinated water and water with high pH levels.

### Preparation

Before beginning assembly, read all warnings and safety precautions. Remove parts from carton. Compare parts with parts list. If any part is missing or damaged, do not attempt to assemble or use the product. Contact customer service for replacement.

 
 
 
 
Estimated time for assembly is 15 minutes.

Tools required for assembly:

- Slotted Screwdriver

## Assembly Instructions

1. Select a flat, level surface for the assembly and final location of fountain.
2. Adjust flow rate on pump to the maximum (+) position.
3. Run pump cord out through the notch at the bottom of the reservoir to ensure that reservoir is level (Fig. 1).
4. Run the pump hose and drain tube through hole of the pedestal. Wedge the plate and the pedestal together (Fig. 2).
5. Attach the pump hose to the outlet on the pump, and position the pump in the center of the reservoir. Connect the drain tube from the pedestal to the drain tube on the reservoir (Fig. 1).
6. Place the pedestal in the reservoir and align the screw holes. Use a flathead screwdriver to secure the pedestal to the reservoir (Fig. 3).
7. Attach the fountain upright to the pedestal by aligning the tube that extends down from the bottom of the fountain upright with the hole in the top of the pedestal (Fig. 4).
8. Put clean water into the reservoir. **Note:** The water level should be approximately 1.57 in. below the top of the reservoir.
9. Plug the pump into a Ground Fault Circuit Interrupter (GFCI) receptacle. The fountain will start to flow.
10. If necessary, adjust the flow rate to the desired level (remember to always disconnect pump from the power source before handling).

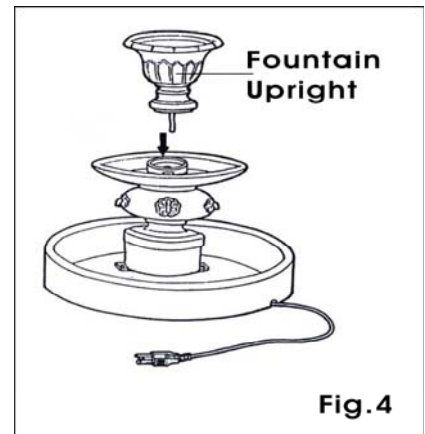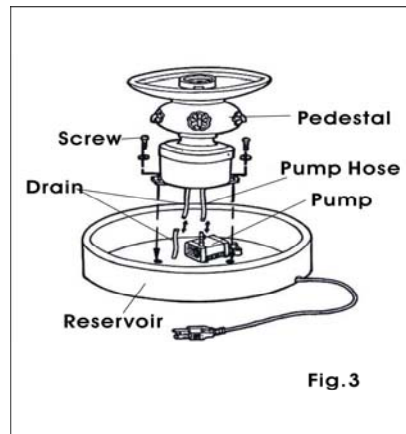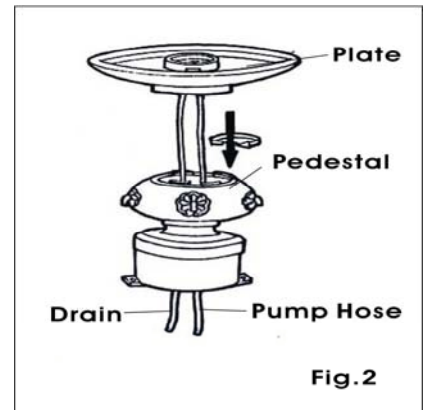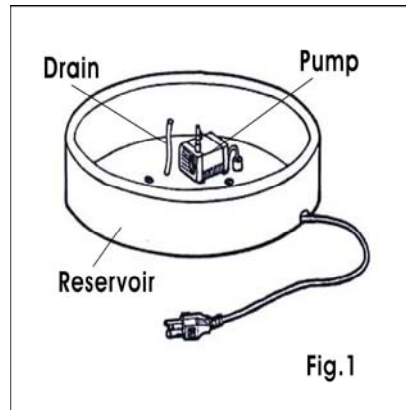

## Pump Maintenance Instructions

- Regular cleaning of the pump is necessary.
- Keep water clean to prolong the life of pump.
- Clean pump when it is dirty or when a drop in performance is detected. Use warm, soapy water and a stiff brush for heavily stained surfaces. Do NOT use harsh chemicals, as this will damage the surface finish.
- Failure to clean the pump will result in overheating and voiding of the warranty.
- Use a filter on pump if available.
- Disconnect the power and empty the reservoir if the fountain will not be used for an extended time.
- Do NOT operate fountain in temperatures below 41°F (5°C). Freeze damage may occur. If the fountain is kept outdoors in freezing temperatures, make sure all water is removed and the unit is completely dry.

### To disassemble pump for cleaning:

1. Always disconnect pump from the power source before cleaning.
2. Remove the inlet screen and impeller housing.
3. Remove the impeller/rotor assembly by gently pulling on the impeller blades.
4. Use a soft cloth or brush to clean the impeller/rotor assembly area inside the pump.
5. Clean the inlet screen, impeller housing and impeller with warm, soapy water.
6. Reassemble the pump and check for proper operation.

## Hints and Troubleshooting

- If the pump operates but there is no flow, check to make sure that the pump is fully submerged.
- If the pump operates but there is no flow, check the supply tubing for kinks and correct.
- If the pump operates but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump out of the water. Remove supply tubing at pump outlet and clean tubing inside and out if necessary. Put pump back into water (outlet side up). Once water begins to flow, reattach the supply tubing.

**Pump is replaceable with model # HI-2000. Call Customer Service at 1-866-432-5867 for replacement parts.**

## **SAVE THESE INSTRUCTIONS!**

**Note:** Each Garden Treasures fountain product may have variations in texture, finish and appearance from unit to unit. This enhances the beauty of the product and makes each Garden Treasures fountain product unique. Some products and finishes are intentionally weathered or worn in appearance for aesthetic design.