



Item # 247668

 
# FOUR TIER OCTAGON FOUNTAIN

Model # 24-23



Questions, Problems, Missing Parts? Before returning to retailer, call our customer service department at 866-728-6187 from 9 a.m. – 5 p.m. EST, Monday – Saturday, or e-mail [customerservice@srq-usa.com](mailto:customerservice@srq-usa.com).

Part	Quantity
Top Fountain	1 pc
Upper Basin	1 pc
Middle Basin	1 pc
Under Basin	1 pc
Holder	1 pc
Pump	1 pc
Water Supply Tube	1 pc
Plastic Cover	1 pc

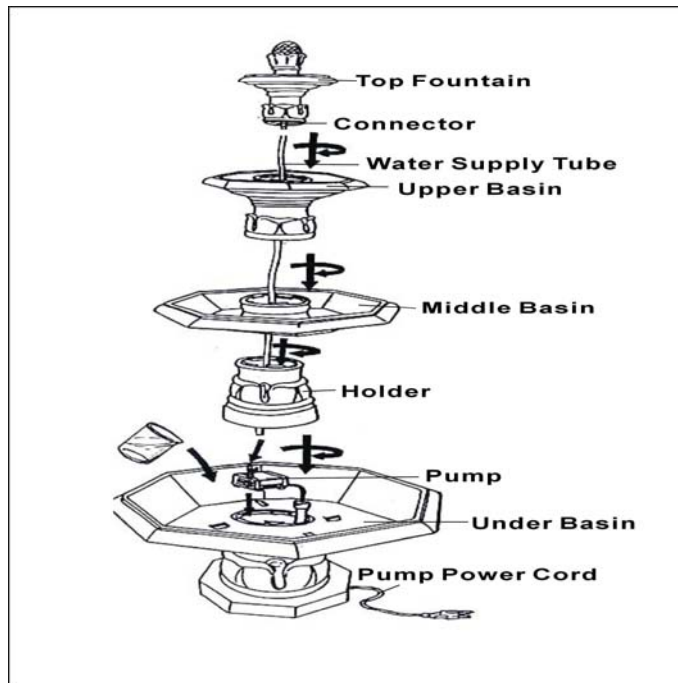

NOTE: Diagram shown is for illustrative purposes only.

## **!** Warnings and Cautions

### Warnings:

- To reduce the risk of electric shock, connect pump only to a Ground Fault Circuit Interrupter (GFCI) outlet.
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source before performing any maintenance or work on the pump or fountain.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- Do not remove the grounding pin from the power cord on pumps with a three-prong, grounded-type plug.

### Cautions:

- Do not install the fountain within 10 ft. (3.05 m) of a pool or spa. If the pump is connected to a Ground Fault Circuit Interrupter (GFCI) protected circuit, the fountain can be installed no less than 5 ft. (1.52 m) from a pool or spa.
- Use the pump only with portable, self-contained fountains no larger than 5 ft. in any dimension.
- Use a proper power source as indicated on the pump label. Keep the cord away from high temperatures and/or heat sources.
- Do not lift the pump by its power cord.
- Keep the fountain out of reach of children.
- Do not let the pump run dry. Pump should be completely submerged for proper operation and cooling.
- Do not pump heated liquids.
- Operate with freshwater only. Avoid heavily chlorinated water and water with high pH levels.

### Preparation

Before beginning assembly, read all warnings and safety precautions. Remove parts from bubble wraps and polyfoam. Compare parts with parts list. If any part is missing or damaged, do not attempt to assemble or use the product. Contact customer service for replacement.

 
Estimated time for assembly is 15 minutes.

Tools required for assembly:

- No tools required


## Assembly Instructions

1. Unpack the contents of the box and check to make sure that all items are accounted for and in good condition.
2. Select a flat, level surface for the assembly and final location of your fountain.
3. Place the under basin on a flat surface and position the pump to the central part of the under basin. Route the pump power cord from the cord slot on the bottom of the under basin via cable pipe attached at inner side of the under basin. Insert the plastic cover into the cable pipe (Fig.1)
4. Attach the middle basin to the holder by lining up the corresponding fittings and turn until middle basin locked onto the holder. (Fig.2)
5. Insert the one end of the water supply tube into the outlet on the pump. Then lead the other end of the water supply tube upward via holder and middle basin. Attach the middle basin with holder to the under basin by lining up the corresponding fittings and turn until under basin locked into the holder. (Fig.3)
6. Continue to lead the water supply tube via the hole in the upper basin. Attach the upper basin to the middle basin by lining up the corresponding fittings and turn until upper basin locked onto the middle basin. (Fig.4)
7. Then connect the water supply tube to the connector attached at the bottom of the top fountain. Attach the top fountain to the upper basin by lining up the corresponding fittings and turn until top fountain locked onto the upper basin. (Fig.5)
8. Fill the under basin with certain clean water. The water level should be approximately 30mm (1.18inch) below the rim of the under basin. Then add water into the middle, upper basin, up to an optimum level, until water just flowing from the basin. (Fig.6)
9. Plug the power cord from pump into the electrical outlet. Turn the power source on. The fountain will begin to work.
10. To ensure fine watering effect, please make sure that the markings on the connection area "↑ - ↓" are just wedged together before the connection of each pillar and basin. Then assembly action can be carried out.
11. To eliminate the possibility of water damage to areas around your fountain, check for leaks and excessive splashing after the initial setup of your fountain. It is highly recommended that this fountain be placed in an area that will not be damaged should the area come in contact with liquid.
12. Do not leave your fountain running for extended periods of time when no one is present to observe the performance.
13. Check the area around your fountain on a regular basis to ensure that there is no leakage.

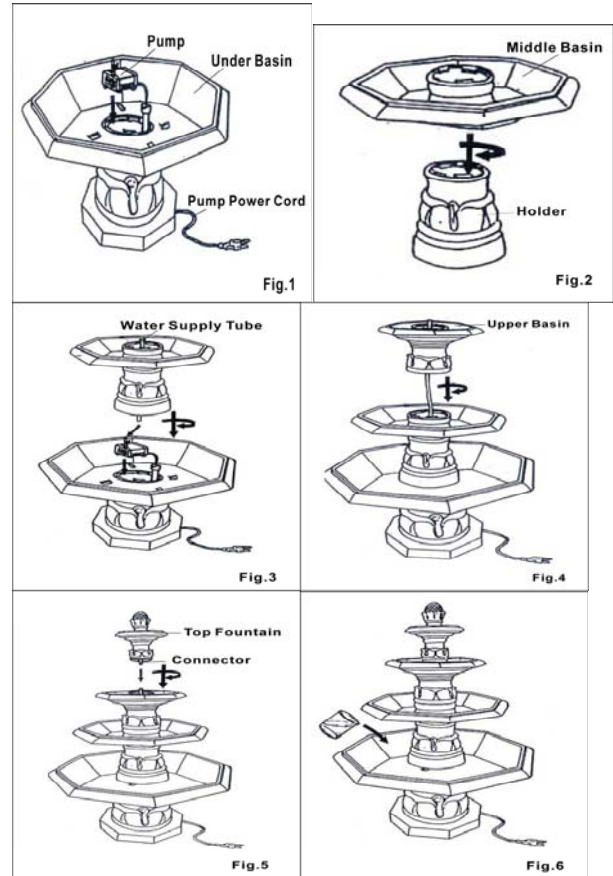

#### Instruction For Installing Water Seal Plastic Cover

 1. Pull the plastic cover off the cable pipe before installing the pump.
2. Pass the pump plug through the cable pipe, lead the pump cable out from the leading wire notch. Then put the pump into the basin steadily.

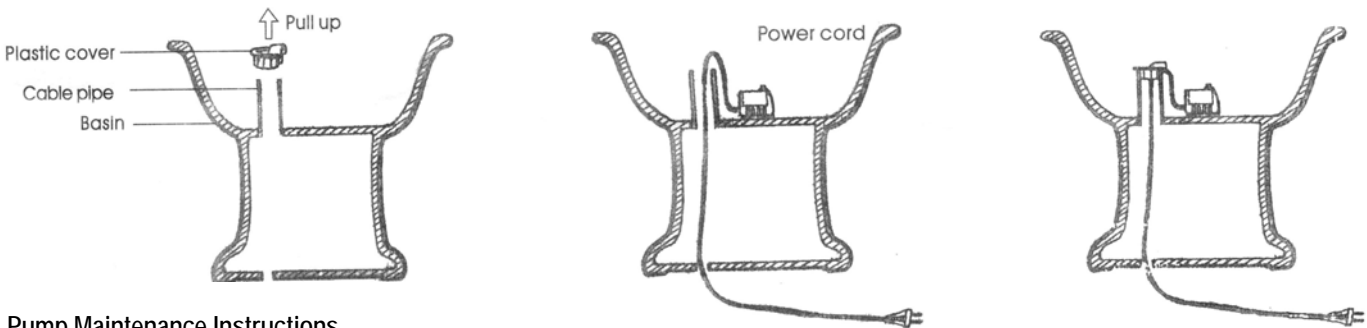


#### Pump Maintenance Instructions

- Regular cleaning of the pump is necessary.
- Keep water clean to prolong the life of pump.
- Clean pump when it is dirty or when a drop in performance is detected. Use warm, soapy water and a stiff brush for heavily stained surfaces. Do NOT use harsh chemicals, as this will damage the surface finish.
- Failure to clean the pump will result in overheating and voiding of the warranty.
- Use a filter on pump if available.
- Disconnect the power and empty the reservoir if the fountain will not be used for an extended time.
- Do NOT operate fountain in temperatures below 41°F (5°C). Freeze damage may occur. If the fountain is kept outdoors in freezing temperatures, make sure all water is removed and the unit is completely dry.

#### To disassemble pump for cleaning:

 1. Always disconnect pump from the power source before cleaning.

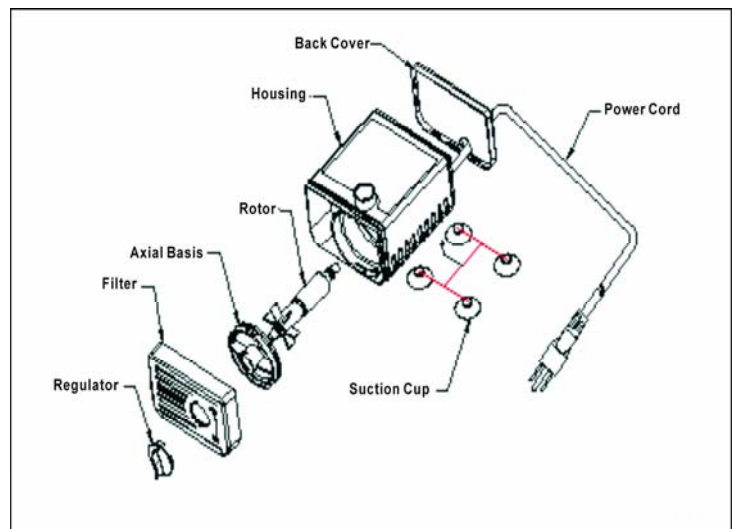

2. Remove the inlet screen and impeller housing.
3. Remove the impeller/rotor assembly by gently pulling on the impeller blades.
4. Use a soft cloth or brush to clean the impeller/rotor assembly area inside the pump.
5. Clean the inlet screen, impeller housing and impeller with warm, soapy water.
6. Reassemble the pump and check for proper operation.

#### **Hints and Troubleshooting**

- If the pump operates but there is no flow, check to make sure that the pump is fully submerged.
- If the pump operates but there is no flow, check the supply tubing for kinks and correct.
- If the pump operates but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump out of the water. Remove supply tubing at pump outlet and clean tubing inside and out if necessary. Put pump back into water (outlet side up). Once water begins to flow, reattach the supply tubing.

**Pump is replaceable with model # PT-202. Call Customer Service at 866-728-6187 for replacement parts.**

#### **SAVE THESE INSTRUCTIONS!**

**Note:** Each Garden Treasures fountain product may have variations in texture, finish and appearance from unit to unit. This enhances the beauty of the product and makes each Garden Treasures fountain product unique. Some products and finishes are intentionally weathered or worn in appearance for aesthetic design.

#### **1 year limited warranty**

Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights which vary from state to state.

Printed in China