

INSTRUCTIONS

Item Description: Water Fall Fountain w/ light Vendor Item # F20333CA

Questions, Problems, Missing Parts? Before returning to your retailer, CALL OUR CUSTOMER SERVICE DEPARTMENT at 1(866)869-5300 8 a.m. - 6 p.m. EST, Monday - Friday or e-mail us at customerservice@geoglobalpartners.com

PARTS LIST:

Part#	Description	Quantity
01.	Top Tier	1
02.	Basin	1
03.	Water Pump	1
04.	Water Supply Tube	1
05.	Hard PVC tube	1

TOOLS REQUIRED FOR ASSEMBLY:

No tools required for assembly

FOUNTAIN ASSEMBLY INSTRUCTIONS:

- Unpack the contents of the box and check to make sure that all items are accounted for and in good condition.
- Select a flat, level surface for the assembly and final location of your fountain.
- Place the Basin on the ground and insert the hard PVC tube into the hole on the top of the Basin as shown in figure 1.
- Locate the Water Pump and adjust the flow control knob to the "Maximum (+)" setting.
- Connect the Water Supply Tube from the Top Tier to the outlet of the Water Pump.
- Place the Water Pump on the bottom of the Basin, near the rear. Snap the lamp into the Lamp Clip on the bottom of the Basin and lead the Water Pump power cord out through the notch in the rear of the Basin.

 Position the Top Tier on top of the Basin so that the hard PVC tube will insert into the hole on the bottom of the Top Tier.
- 7.
- Add clean water into the Basin. The water level should be approximately 1" below the rim of the Basin.
- Plug the Water Pump power cord into a properly grounded, grounding type receptacle (GFCI). The fountain will begin to flow. See the "HINTS & TROUBLESHOOTING" section for additional details.

 10. To eliminate the possibility of water damage to areas around your fountain, check for leaks and excessive splashing after the initial setup of
- your fountain. It is highly recommended that this fountain be placed in an area that will not be damaged should the area come in contact with liquid.
- 11. Do not leave your fountain running for extended periods of time when no one is present to observe the performance.
- 12. Check the area around your fountain on a regular basis to ensure that there is no leakage.

MAINTENANCE OF YOUR FOUNTAIN:

- Keep water clean using clean water will reduce mineral deposits and improve water clarity.
- Clean the fountain periodically to prevent mineral deposits and contamination. Use warm soapy water and a stiff brush for heavily stained Do not use harsh chemicals as this will damage the finished surface and void the warranty.
- Add clean water periodically to ensure that the pump is fully submersed in water.
- Disconnect the power and empty the basin if the fountain will not be used for an extended time.
- If installed outdoors and in a freeze-area of the country, ensure that all water is removed and the unit is completely dry. This product is NOT to be operated below 41°F (5°C) freeze damage may occur.

PUMP INSTRUCTIONS:



SPECIAL WARNINGS & CAUTIONS:

WARNINGS:

- To reduce the risk of electric shock, connect only to a properly grounded, grounding type receptacle (GFCI).
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source prior to beginning any maintenance or work on the pump or fountain.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- For pumps with a 3-prong, grounded type plug, do not remove the grounding pin from the plug on the power cord.

- The fountain shall not be installed within 10 feet (3.05m) of a pool or spa. When the pump is connected to a GFCI protected circuit, the fountain unit has the option of being installed no less than 5 feet (1.52m) from a pool or spa.
- Use only with portable, self contained fountains no larger than 5' in any direction.
- Use a proper power source as indicated on the pump label. Keep the cord away from high temperature and/or heat sources.
- Do not lift the pump by its power cord.
- Keep the fountain out of reach of children.
- Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
- Do not pump heated liquids.
- Operate in freshwater only. Avoid heavily chlorinated water and water with high PH levels.

PUMP ASSEMBLY INSTRUCTIONS:

- Remove the pump from the package and until the power cord.
- Place the pump in the desired location in your pond or fountain ensuring that it is completely submerged in the water. If the pump is to be used in a pond, raise the pump off of the pond floor to ensure that it is above any dirt that will collect as this will adversely affect the performance of the pump.

- 3. Adjust the flow rate (if applicable) to the maximum (+) position.
- 4. Connect the power cord from the pump to a properly grounded, grounding type receptacle (GFCI).
- 5. If necessary, readjust the flow rate to the desired level (remember to always disconnect from the power source before handling the pump).

CARE & MAINTENANCE:

- Keep the water clean clean water will prolong the useful life of your pump.
- 2. Use a pre-filter on your pump if available.
- 3. Regular cleaning of the pump will be necessary depending upon the environment in which it is operated. Clean the pump when it is visibly soiled or when a noticeable drop in performance is detected. Failure to clean the pump will result in overheating of the pump and the voiding of the warranty!
- 4. Before cleaning, always disconnect the pump from the power source.
- 5. Disassemble the pump by removing the inlet screen & the impeller housing. Remove the impeller/rotor assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the area inside of the pump where the impeller/rotor assembly was. Clean the inlet screen, impeller housing & impeller in warm soapy water. Reassemble the pump and inspect for proper operation.

HINTS & TROUBLESHOOTING:

- 1. Ensure that the pump's flow control switch is set to maximum (+) before operating. Once the flow is established, the pump can be adjusted downward to the desired level.
- 2. If the pump operates, but there is no flow, check to ensure the pump is fully submerged.
- 3. If the pump operates, but there is no flow, check the supply tubing for kinks and correct.
- 4. If the pump operates, but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump from the water. Remove supply tubing at pump outlet and clean tubing inside and out if necessary. Reset pump in water (outlet side up) and once water begins to flow, re-attach the supply tubing.

Call Customer Service for replacement parts

Transformer is replaceable with model #66CYL-42-12V Bulb is replaceable with model #12V-10W Pump is replaceable with model HI-1000low voltage.

SAVE THESE INSTRUCTIONS!

Each Peaktop product may have variations in texture, finish and appearance from one unit to the next. This enhances the beauty of the product and makes your Peaktop product uniquely individual. Some products and finishes are intentionally weathered or worn in appearance for aesthetic design.

LIGHT BULB REPLACEMENT INSTRUCTIONS:

- 1. If the accent light bulb is burned out, unplug the transformer from the power source. Wait a few minutes until the light is fully cool.
- 2. Pull the glass tube that covers the light bulb, from the receptacle by firmly grasping and twisting the tube.
- 3. The bulb may now be pulled from its socket and replaced with a new bulb (See fig. 4).

IMPORTANT SAFETY INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS

WARNING - Lighted lamp is HOT!

Unplug and allow the lamp to cool before handling the lamp.

Keep lamp away from materials that may burn.

Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage lamp.

Do not operate the lamp with a missing or damaged lamp covers.

TRANSFORMER INSTRUCTIONS:

IMPORTANT SAFETY INSTRUCTIONS


When using electrical product, basic precautions should always be practiced including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- 2. Read and follow all instructions that are on the product or provided with the product.
- 3. For a cord-connected or direct plug-in power unit, do not use an extension cord.
- 4. Reference the National Electrical Cord, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
- 5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- 6. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.
- 7. For a cord-connected or direct plug-in unit, do not use in bathroom.
- 8. For cord-connected power unit, user should pay attention to below statement:

WARNING:

- 1. Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
- 2. Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
- 3. Mount the unit at a height greater than 1 foot from the ground surface.

Do not use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed)

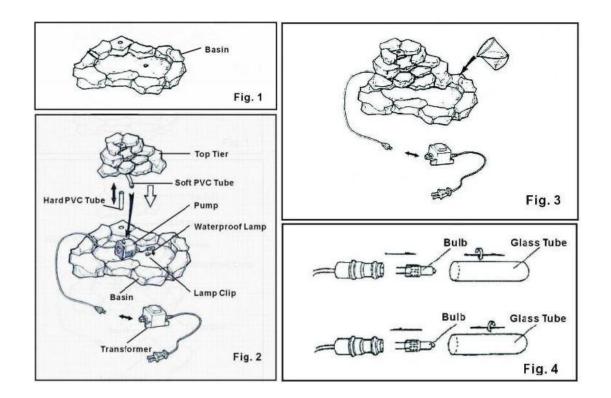

NOTE: The diagrams shown are for illustrative purposes only.

Ref. # DE93594 Printed in China