

## INSTRUCTIONS

Item Description: Stone Fountain

Vendor Item # F50699AA

Questions, Problems, Missing Parts? Before returning to your retailer, CALL OUR CUSTOMER SERVICE DEPARTMENT at (866)728-6187 9 a.m.– 5 p.m. EST, Monday – Friday or e-mail us at customerservice@srg-usa.com

### PARTS LIST:

Part#	Description	Quantity
01.	Fountain basin	1
02.	Pedestal	1
03.	Top Fountain	1
04.	Pump	1

### TOOLS REQUIRED FOR ASSEMBLY:

- No tools required

### FOUNTAIN ASSEMBLY INSTRUCTIONS:

1. Unpack the contents of the box and check to make sure that all parts are complete for and in good condition.
2. Select a flat, level surface for the assembly and final location of your fountain.
3. Route the pump power cord extending from the underside of the basin through the pedestal hole. Attach the basin to the pedestal by aligning the arrowhead mark on the top of the pedestal with the other arrowhead mark carved at the out bottom of the basin.
4. Turning the basin in a clockwise direction to lock it into the pedestal. Route the pump power cord from the cord slot at the bottom of the pedestal. Then place the pedestal with the basin on a flat surface. (As shown in Fig.1)
5. Insert the water supply tube into the outlet on the pump. (Note: Place the pump flat to the basin.) (As shown in Fig.2)
6. **When placing top fountain to the basin, please be sure the arrowhead mark on the top fountain match with the arrowhead mark on the basin.**
7. Fill the basin with clean water. The water level should be approximately 10mm below the top rim of the basin. (As shown in Fig.3)
8. Plug the pump power cord into the electrical outlet. The product will begin to operate.
9. To eliminate the possibility of water damage to areas around your fountain, check for leaks and excessive splashing after the initial setup of your fountain. It is highly recommended that this fountain be placed in an area that will not be damaged should the area come in contact with liquid.
10. Do not leave your fountain running for extended periods of time when no one is present to observe the performance.
11. Check the area around your fountain on a regular basis to ensure that there is no leakage.

### MAINTENANCE OF YOUR FOUNTAIN:

1. Keep water clean - using clean water will reduce mineral deposits and improve water clarity.
2. Clean the fountain periodically to prevent mineral deposits and contamination. Use warm soapy water and a stiff brush for heavily stained surfaces. **Do not use harsh chemicals as this will damage the finished surface and void the warranty.**
3. Add clean water periodically to ensure that the pump is fully submersed in water.
4. Disconnect the power and empty the basin if the fountain will not be used for an extended time.
5. If installed outdoors and in a freeze-area of the country, ensure that all water is removed and the unit is completely dry. This product is **NOT to be operated below 41°F (5°C) freeze damage may occur.**

### PUMP INSTRUCTIONS:



### SPECIAL WARNINGS & CAUTIONS:

#### WARNINGS:

1. To reduce the risk of electric shock, connect only to a properly grounded, grounding type receptacle.
2. Do not exceed the voltage shown on the pump.
3. Always disconnect the pump from the power source prior to beginning any maintenance or work on the pump or fountain.
4. Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
5. For pumps with a 3-prong, grounded type plug, do not remove the grounding pin from the plug on the power cord.

#### CAUTIONS:

1. The fountain shall not be installed within 10 feet (3.05m) of a pool or spa. When the pump is connected to a GFCI protected circuit, the fountain unit has the option of being installed no less than 5 feet (1.52m) from a pool or spa.
2. Use only with portable, self contained fountains no larger than 5' in any direction.
3. Use a proper power source as indicated on the pump label. Keep the cord away from high temperature and/or heat sources.
4. Do not lift the pump by its power cord.
5. Keep the fountain out of reach of children.
6. Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
7. Do not pump heated liquids.
8. Operate in freshwater only. Avoid heavily chlorinated water and water with high PH levels.

### PUMP ASSEMBLY INSTRUCTIONS:

1. Remove the pump from the package and untie the power cord.
2. Place the pump in the desired location in your pond or fountain ensuring that it is completely submerged in the water. If the pump is to be used in a pond, raise the pump off of the pond floor to ensure that it is above any dirt that will collect as this will adversely affect the performance of the pump.
3. Adjust the flow rate (if applicable) to the maximum (+) position.
4. Connect the power cord from the pump to a properly grounded, grounding type receptacle (GFCI).
5. If necessary, readjust the flow rate to the desired level (remember to always disconnect from the power source before handling the pump).

### CARE & MAINTENANCE:

1. Keep the water clean – clean water will prolong the useful life of your pump.
2. Use a pre-filter on your pump if available.
3. Regular cleaning of the pump will be necessary depending upon the environment in which it is operated. Clean the pump when it is visibly soiled or when a noticeable drop in performance is detected. **Failure to clean the pump will result in overheating of the pump and the voiding of the warranty!**
4. Before cleaning, always disconnect the pump from the power source.
5. Disassemble the pump by removing the inlet screen & the impeller housing. Remove the impeller/rotor assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the area inside of the pump where the impeller/rotor assembly was. Clean the inlet screen, impeller housing & impeller in warm soapy water. Reassemble the pump and inspect for proper operation.

**HINTS & TROUBLESHOOTING:**



1. Ensure that the pump's flow control switch is set to maximum (+) before operating. Once the flow is established, the pump can be adjusted downward to the desired level.
2. If the pump operates, but there is no flow, check to ensure the pump is fully submerged.
3. If the pump operates, but there is no flow, check the supply tubing for kinks and correct.
4. If the pump operates, but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump from the water. Remove supply tubing at pump outlet and clean tubing inside and out if necessary. Reset pump in water (outlet side up) and once water begins to flow, re-attach the supply tubing.

**Pump is replaceable with model # PT-707MIX.**

**Call Customer Service for replacement parts.**

**SAVE THESE INSTRUCTIONS!**

Each Peaktop product may have variations in texture, finish and appearance from one unit to the next. This enhances the beauty of the product and makes your Peaktop product uniquely individual. Some products and finishes are intentionally weathered or worn in appearance for aesthetic design.

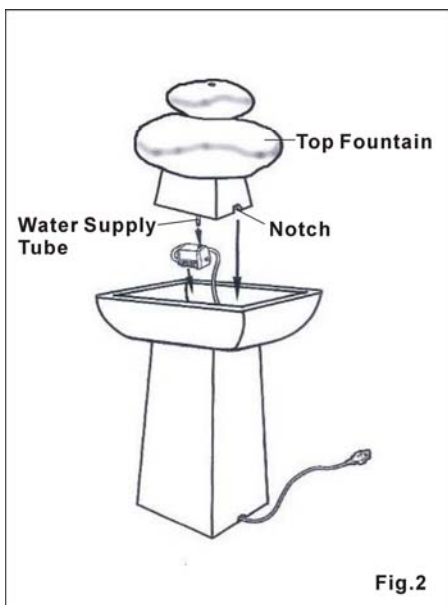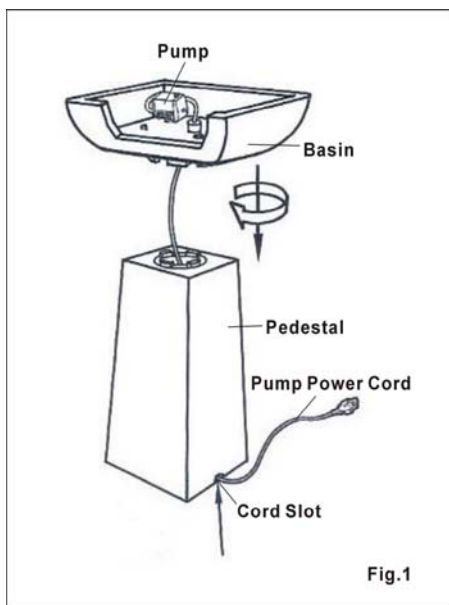

NOTE:  
The diagrams shown are for illustrative purposes only.

Ref. #DE86040

Printed in China